Status Indicator LED's

Press ON/OFF button to turn printer on. Three LED indicators located on the top of the printer indicate various printer functions. LED will indicate function as described below:

LED	State	Status
LED #1	Green	If the LED's Color is Green it indicates that Power is ON and that the printer is in RS-232 or IrDA mode
	Purple/Orange	Low Power Mode (If in BT/802.11b mode the LED is Purple; If in RS-232 mode the LED is Orange.
	Blue	If the LED's Color is Blue it indicates that Power is ON and that the printer is in Bluetooth or 802.11b mode
LED #2	Yellow	The battery charger is charging the battery at a fast rate. If the battery is below 5V, the battery is being "trickle" charged until the battery voltage reaches 5V, and then the fast charge rate is started. The LED will turn off when the battery is fully charged.
LED #3	Green	· Indicates that MCR is ready to accept data. · Indicates that SCR is ready to accept data.
	Red	· Indicates a fault condition or a printer error. The printer is not ready to accept data. · Printer is out-of-paper ***Note:*** *Refer to the troubleshooting guide to determine error or fault condition.*

Performing Self Test

1. Printer must be turned off.

2. Press and Hold Paper Feed Button

3. While holding Paper Feed Button, press On/Off Button

Copyright © 2007 Extech Instruments Corporation. All rights reserved including the right of reproduction in whole or in part in any form.
Extech Instruments Corporation 285 Bear Hill Rd., Waltham, MA 02451-1064
Phone: 1-781-890-7440 **Fax:** (781) 890-7864 **WEB:** www.extech.com/printers
060607-R3

Model S3750THS

Mobile Printer

EXTECH® INSTRUMENTS

Quick Start Guide

This guide provides a reference illustration of the initial steps to quickly get your Model S3750THS up and running. Refer to the User's Guide for more detailed information on the operation and use of Model S3750THS. A copy of User's Guide can be downloaded from ***www.extech.com/printers***

S3750THS Overview

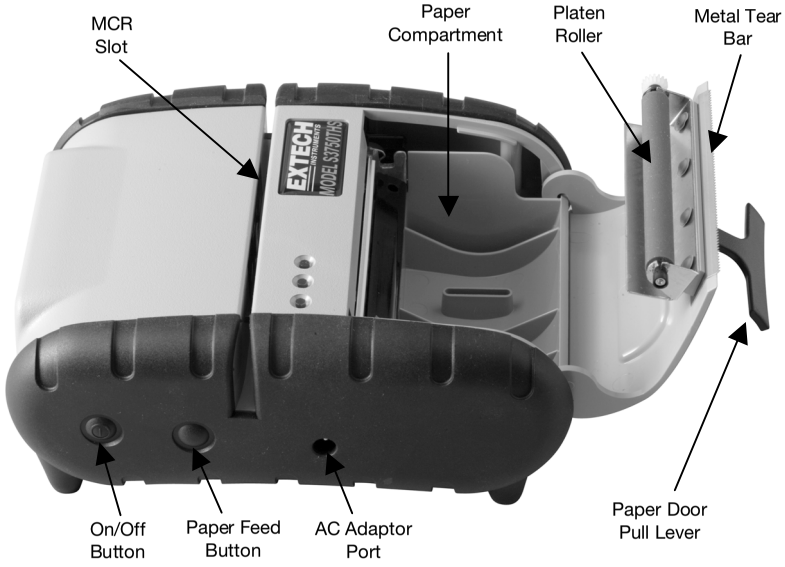

Installing the Battery

1. Unlock the battery door by sliding the locking tab down.

2. Open the battery door to an angle of about 90 degrees. (Do not force open)

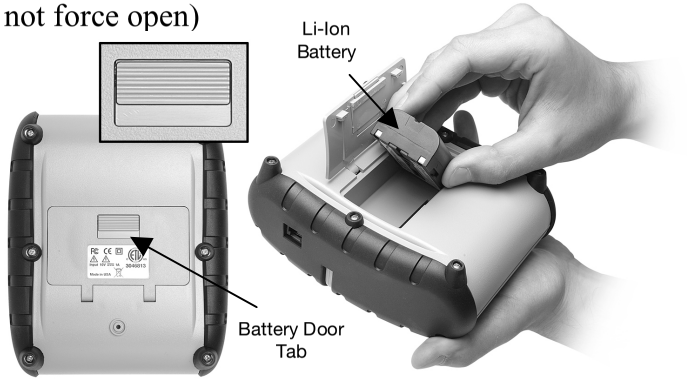

Note: Ensure that battery side with 2 contact terminals are facing down to make contact with the spring probes inside the battery compartment

3. Insert battery as shown (non-contact end first and let the contact end drop into place).

4. Close the battery door by sliding the locking tab up.

Charging the Battery

1. Plug battery charger adaptor output cable into the battery charger connector.

2. Plug battery charger adaptor into the appropriate AC line voltage socket.

3. LED will illuminate indicating that the battery is being charged.

4. The battery will be fast charged and after 180 minutes the LED will turn off.

Installing the Paper Roll

1. Open the Paper Supply Cover by placing your fingers under the "T" pull lever and pulling up firmly on the supply cover until the lever stops moving. Cover should open to a 90° angle.

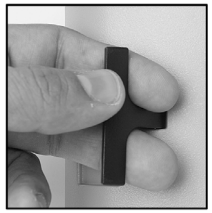

Note: Do not pull too hard. Use enough force to allow cover to unlock and lift freely

2. Install Paper Roll

Note: Pull paper roll leader out of printer. Note direction of paper travel.

3. Close Paper Supply Cover and press closed.

4. Turn on the printer by pressing Power button and test the paper advance function by pressing the Paper Feed button. Verify that paper advances correctly.

Tearing Paper

The printer's paper door acts as tear bar. To tear paper pull one edge of the paper against the tear bar as shown, then tear down and across against the tear bar to tear the paper.

Note: Pulling paper up and/or sideways without using the tear bar can cause a paper jam due to paper misalignment in printhead mechanism.